





Dambers - et 1941

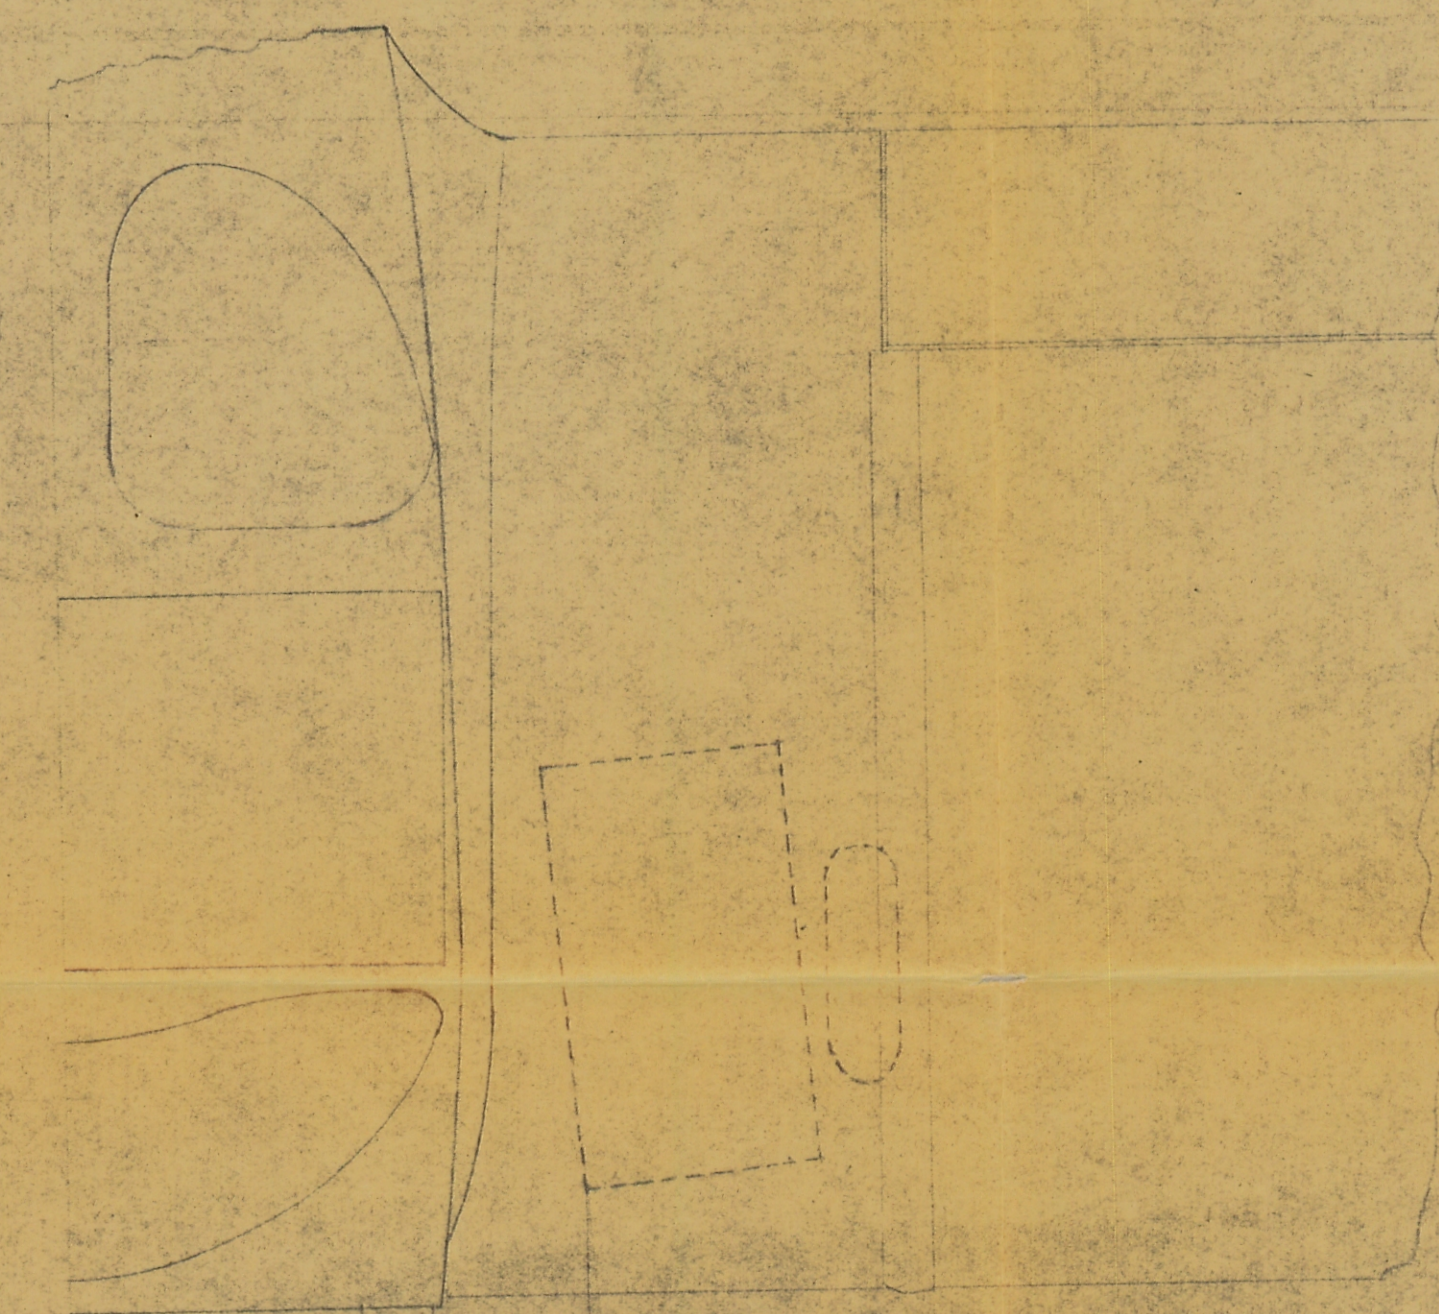

Wing Chord Line

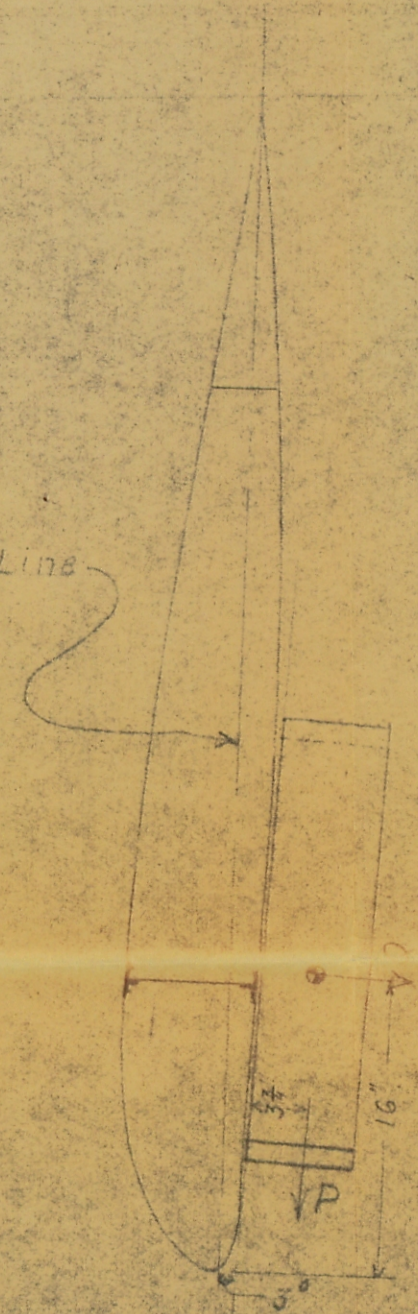

NOTE - Mounting brackets to be attached to wing in position indicated by means of bolts and spacers. Location of bolts to be determined at time of installation. Wing structure to be reinforced if necessary to carry a design load P of 200 lbs. and Q of 200 lbs.

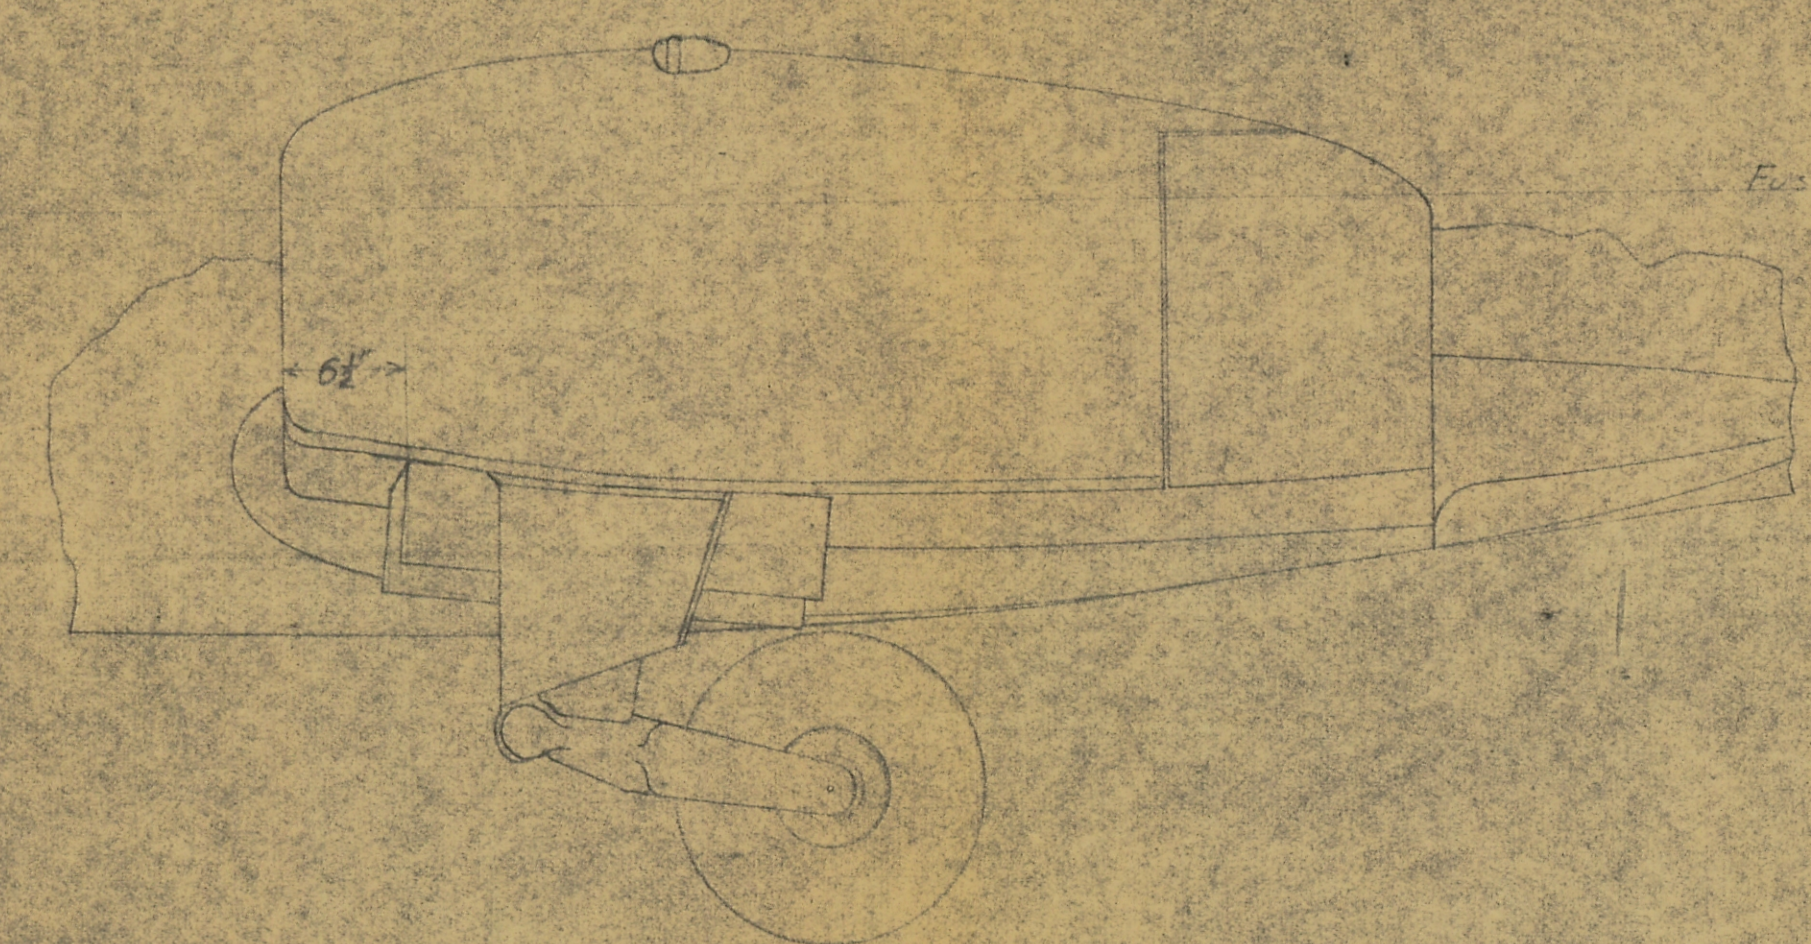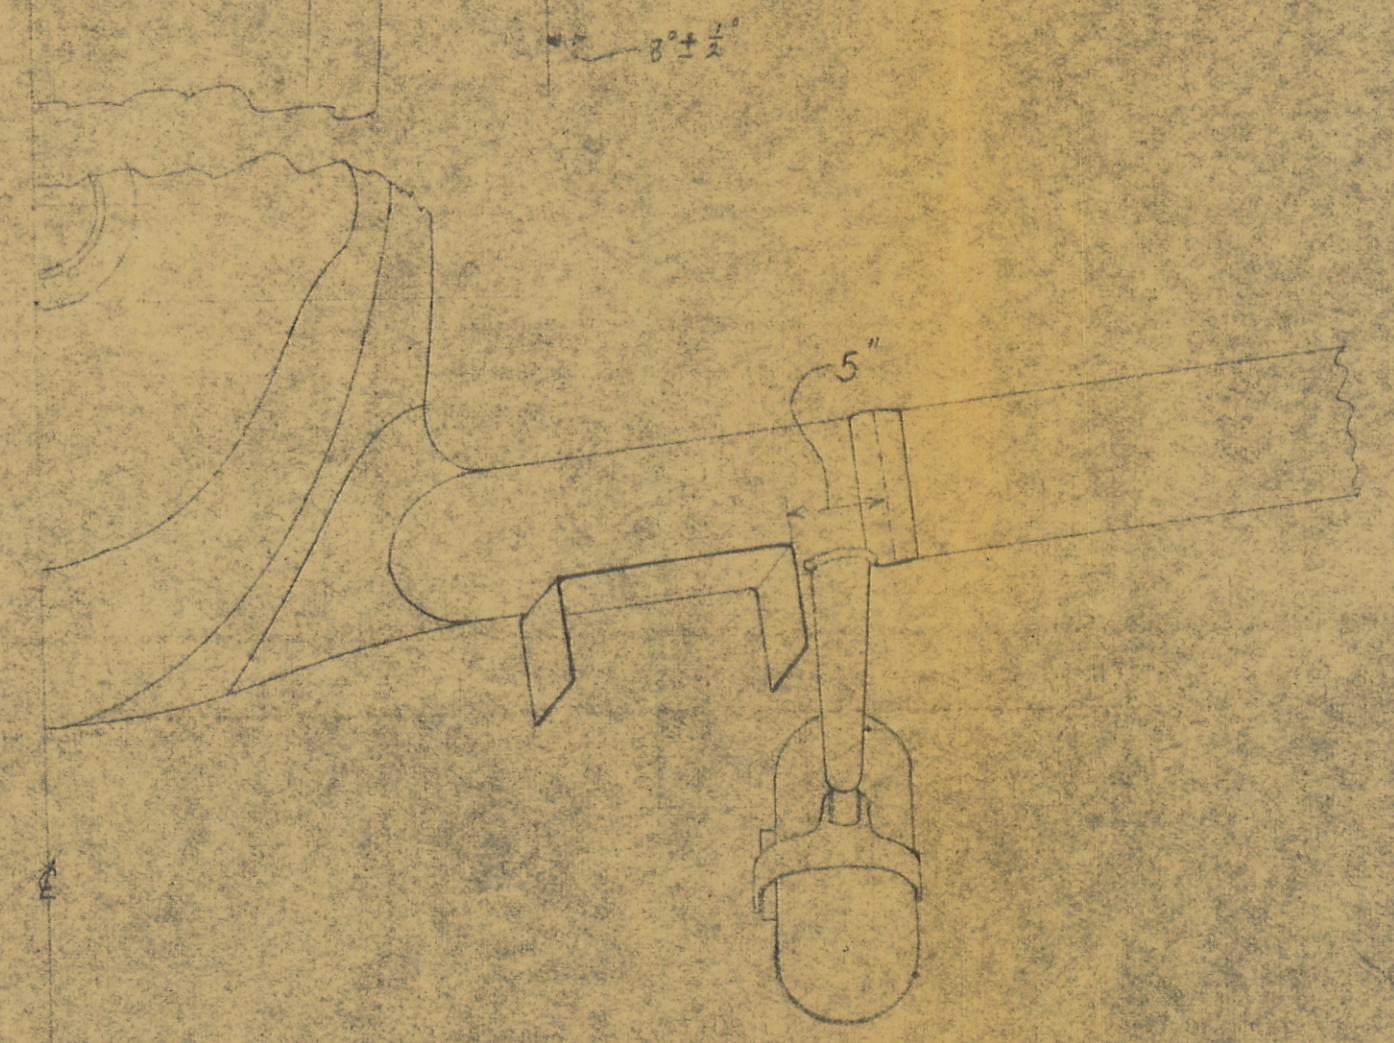

			TOLERANCES $\pm .010$ OR $\frac{1}{16}$ UNLESS OTHERWISE NOTED			
			SCALE - $\frac{1}{10}$			
MATERIAL	FINISH	HEAT TREAT	DRAFTSMAN	CHECKED	APPROVED	ENGINEER
GUGGENHEIM AERONAUTICAL LABORATORY CALIFORNIA INSTITUTE OF TECHNOLOGY			MOUNTING BRACKET JET PROPULSION PROJECT			4-265-P-17-3 No. 1
			NAME			DRAWING NO.